


Installation for Mesh Crib Liner

Fits Four-Sided Slatted & Solid Back Cribs



PACKAGE INCLUDES:

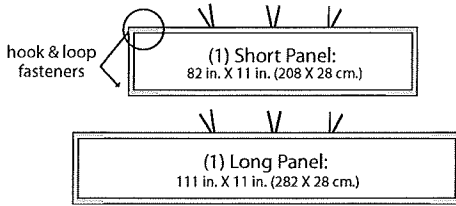

Contents: 100% Polyester
Easy Care: For best results, Machine wash warm, gentle cycle. Wash separately or with like colors. Only non-chlorine bleach when needed. Tumble dry low.
SECURE ALL FABRIC FASTENERS BEFORE LAUNDERING TO AVOID SNAGGING.


BreathableBaby, LLC
 2841 Hedberg Drive, Minnetonka, MN 55305.
 ©2016 BreathableBaby, LLC. **MADE IN CHINA.**

Customer Service: 1-877-827-4442

⚠ WARNING: TO REDUCE THE RISK OF SUFFOCATION, KEEP TOP OF LINER UP AND IN POSITION. DO NOT ALLOW LINER TO SAG DOWN OR IN TOWARD THE SLEEPING SURFACE. DO NOT USE LINER IF SAGGING CANNOT BE CORRECTED. TO PREVENT ENTANGLEMENT OR STRANGULATION, POSITION TIES TO OUTSIDE OF CRIB AND BE SURE THEY ARE SECURE. REMOVE LINER WHEN CHILD CAN SIT UP UNAIDED OR CAN PULL TO A STANDING POSITION.


Four-Sided Slatted Crib

START HERE - Figure 1: Installing Long Panel

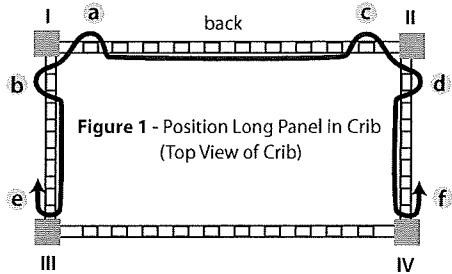


Step 1. Properly position Long Panel along INSIDE, BACK of crib
 1. Long Panel covers slats at BACK and SIDES of crib as shown above.
 2. Make sure ties face UPWARDS and are OUTSIDE the crib.

Figure 2: Weaving Long Panel Around BACK Corner Posts (Inside View of Crib)

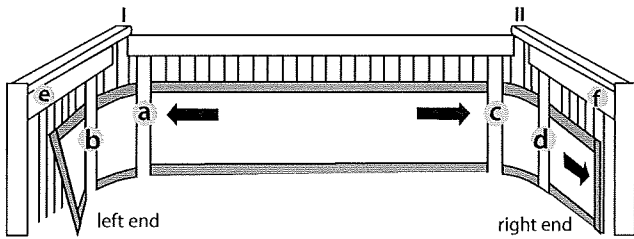


Step 2. Covering Back Left (I) and Right (II) corner posts
 1. Take left end of liner and weave BEHIND the crib slat (a),
 2. then in FRONT of the back corner post (I) and BEHIND crib slat (b).
 3. Repeat for right side (c and d).

Figure 3: Securing Ends of Long Panel (Outside View of Crib)

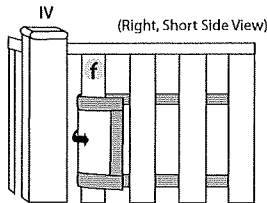


Step 3. Securing ends of Long Panel (refer to Figure 1 and 3)
 1. Wrap and secure fasteners of right side of liner BEHIND crib slat (f) on the crib short side.
 2. Repeat for left side (e) crib slat.
 3. To prevent sagging, pull liner tight at both ends for a snug fit.

Figure 4: Installing Short Panel

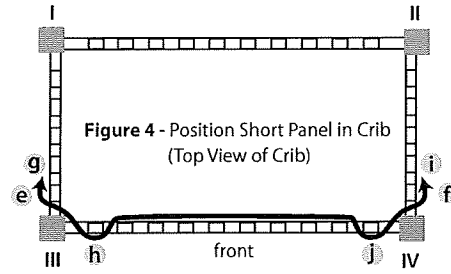

Step 1. Properly position Short Panel along INSIDE, FRONT of crib
 1. Short Panel covers slats at FRONT of crib as shown above.
 2. Make sure ties face UPWARDS and are OUTSIDE the crib.

Figure 5: Weaving Short Panel Around FRONT Corner Posts (Outside View of Crib)

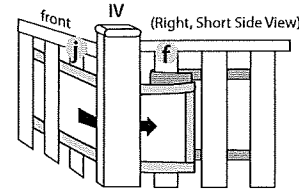

Step 2. Covering Front Right (IV) and Left (III) corner posts
 1. Take right end of the liner and weave BEHIND crib slat (j),
 2. then in FRONT of corner post (IV) and finish BEHIND crib slat (f).
 3. Repeat for left side corner post (III).

Figure 6: Securing Ends of Short Panel (Outside View of Crib)


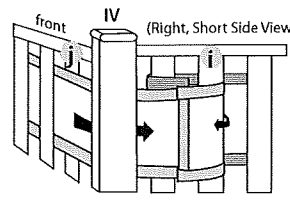


Figure 7 - FRONT (Outside View of Crib)

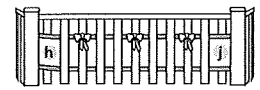

Step 3. Securing ends of Short Panel (refer to Figure 4 and 6)
 1. Wrap and secure fasteners of right side of liner BEHIND crib slat (i) on the crib short side.
 2. Repeat for left side (g) crib slat.
 3. To prevent sagging, pull liner tight at both ends for a snug fit.

Solid Back Crib

Step 1. Properly position Long Panel along INSIDE, FRONT of crib
 1. Long Panel covers slats at the FRONT and SIDES of crib as shown in Figure 8. You will not use the Short Panel.
 2. Make sure ties face UPWARDS and are OUTSIDE the crib.
 3. Follow Figure 2 and Figure 3 for weaving through slats and attaching ends of Long Panel to outside of crib.

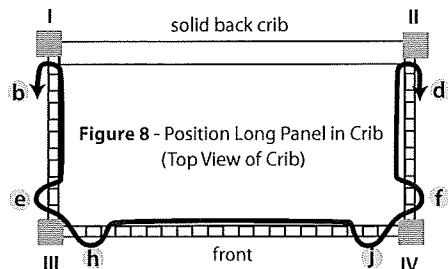


Figure 8 - FRONT (Outside View of Crib)

